PROPRIETARY ROLL LOCK SOCKET (ILUMINAR FIXTURES)

ILUMINAR Lighting created the first of its kind, single-handed "Roll-Lock" socket for simple, one-handed lamp installation. We know it can get tricky to load new lamps - it's too easy to drop the lamp and lose that investment. Keep your lamps safe when you install using the Roll Lock socket. The Roll Lock Socket works with all DE Lamps - HPS, MH, and CMH, for all wattage options.





Photo A

Photo B

Photo C

ROLL LOCK SOCKET INSTALLATION

- Slide both levers away from the lamp to the "Open" position. (Photo A) Each socket applies up to 5mm of lateral pressure to ensure a secure fit.
- 2. Ensure both wire ends/leads are straight DO NOT BEND THE WIRE LEADS! Ensure the wire leads are NOT FRAYED OR LOOSE (if there are frays, twist them back into the wire leads). Small frays of metal can cause the fixture to arc or melt.

CAUTION: DO NOT HANDLE THE LAMP WITH BARE HANDS

The oils from your hands can be dangerous when burning off in the high heat of the lamp.

ROLL LOCK SOCKET INSTALLATION (CONT.)

- 3. Using soft gloves to handle the lamp, slide the lamp into the fixture (with metal leads straight) until the lamp is fully seated.
- 4. Rotate the bulb, itself, to lock it into place (so that it will not move).
- 5. Slide both socket levers toward the lamp to the "closed" position to add a second lock to fix the lamp into position. If the lamp is seated correctly, both levers should easily slide inward to lock the DE lamp into the socket. It is now ready to use.

DO NOT force the levers closed, this can cause damage to both the lamp and the levers. DO NOT handle the lamp with bare hands. Always wear surgical or cloth gloves when handling the lamp to minimize fingerprints and oils left on the lamp. If the lamp needs cleaning after installation, use a soft, dry cotton cloth to wipe off fingerprints/skin oils.



DO NOT FRAY

ROLL LOCK SOCKET UNINSTALL





DO NOT BEND

- 1. To remove or change the lamp, simply follow the steps above.
- 2. Slide both socket levers away from the lamp to the "Open" position. (Photo A)
- 3. **USING SURGICAL OR COTTON GLOVES**, gently rotate the lamp itself to open the Roll Lock Socket.
- 4. Gently lift the lamp out of the sockets.
- 5. Rotate the new bulb into place.
- 6. Slide both socket levers toward the lamp to the "closed" position.

WATCH ROLL LOCK VIDEO GUIDE





© Copyright 2022 ILUMINAR Lighting Subject to change without notice.

iluminarlighting.com Toll Free: 1-877-540-5588